

UrSOSButton

UrSOSButton™ is a lightweight discreet personal alarm button. It has been designed to give you an easy way to summon help in an emergency. With only one button its simple design means that even in a crisis it's easy to activate.

UrSOSButton™ works in conjunction with an Android Smartphone via Bluetooth. When activated your phone is instructed to send SMS text alerts containing a Map link to your location, GPS coordinates, Nearest Address and Free Text to 5 nominated contacts. To further enhance your safety and security **UrSOSButton™** can also automatically call 5 selected contacts.

Weighing only 16 grams, **UrSOSButton™** can be attached to a key chain or lanyard or popped into a shirt pocket and be barely noticeable. It's similarity to a USB memory stick makes it easy to use discreetly and because of in-built vibration feedback no one would know but you when you've activated it.

UrSOSButton™ is there when you need it. It has an internal rechargeable battery which when fully charged can last up to a year and charging only takes about 45 minutes. You can be up to 50 meters (LOS) from your phone and **UrSOSButton™** will still be able to raise the alarm. Even if your phone screen is locked **UrSOSButton™** is able to activate your alert.

UrSOSButton™ gives you, your family, friends and colleagues true peace of mind with the knowledge that if help is needed it's only a button press away.

Navigation



Home

The home screen displays the last time **UrSOSButton™** connected with your phone. If the last checked time is over 24 hours old it is coloured red.

Next you have 3 additional options, Refresh position, display your position on google maps and send current position.




Refresh your current GPS position



Show your current position on google maps. Requires an internet connection.



Send your current position to a contact, or a phone number, or post it on facebook.

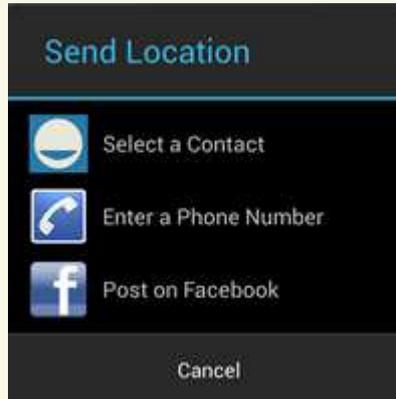

Contacts

You can nominate up to five contacts that will received your alert messages and phone calls. There are two options available to manage your contacts, Clear Contact and Update Contact.



Clear contact removes the current contact details for a nominated contact entry.



Update contact pop up a list of you contacts and allows you select from the list. The pop contact list may take some time to load based on the number of contacts you have in your phone.

More

Displays additional options and settings.

Advanced

My Information, record information about yourself. Medical conditions, Doctors contact details, special instructions are always useful to record. This information is transmitted in the second SMS when you activate an alert.

Alert Message Headline, you can set the alert headline that will be sent with your location when you activate an alert. This information is sent in the first SMS message when you activate an alert.

GPS Settings

Update Frequency, set the update frequency (minutes) to acquire a new gps position.

Position Valid, set the length of time that the current position is valid for. This is

used when an alert is activated to see if the current position should be considered valid or not. If the position is not valid then the old position is sent but a new position will be sought and re-transmitted.

Map Language, the language the Google Maps is to use. This can be useful for users you prefer to operate google maps in their native language instead of english.

SOS Settings

Send SMS Only, only send SMS messages, do not make phone calls.

Auto Answer, if you are in alert mode and your phone rings the incoming call will be auto answered, and device dependant, it will switch to speaker phone.

SMS Retry, the number of times to retry the sending of an SMS message to a contact.

Phone Retry, the number of times to retry the calling of a contact.

Alert Resolution

False Alert, the message that can be sent if your alert was a false alert.

Alert Closed, the message that can be sent when you close your alert.

Alert Activation

You can set how you want an alert activated. Each event has two possible methods, Dis-Charging and/or Charging.



You can select any combination of the following events to trigger an alert activation; *Power On, Single Click, Double Click, Triple Click, Long Press*

Play "Success" when battery is good, will play a audio notification when *Power On, Single Click* event are received.

Play "Failure" when battery is low, will play a audio notification when *Power On, Single Click* event are received.

Facebook

Connect, press this to connect to your facebook account. The standard facebook login screen will be displayed to you. Enter you user name and password to login. A message will be displayed when you are connected to facebook.

Disconnect, press this to disconnect from facebook. A message will be displayed when you are disconnected from facebook.

Request Permission, you will need to press this only once when you first use the facebook feature. This will allow **UrSOSButton™** to post alert's and locations positions to your facebook page. This is a very useful feature if you set off an alert, one post to your facebook page and all your friends will get the notification that you are in trouble. When friends click on the facebook post google maps will show your position and users can then use the navigation feature in google maps to plot a course to you.

Help

Displays the **UrSOSButton™** help page.

Exit

Exits **UrSOSButton™**